**BECKHOFF** New Automation Technology

# Documentation | EN



## HD Bus Terminals with digital outputs, 24 V DC



# Table of contents

1	Fore	word	. 5
	1.1	Notes on the documentation	. 5
	1.2	Safety instructions	6
	1.3	Documentation Issue Status	. 7
	1.4	Interference-free Bus Terminals	8
2	Prod	uct overview1	12
	2.1	KL2808 1	12
		2.1.1 Introduction and contact assignment 1	12
		2.1.2 Technical data 1	14
	2.2	KL2828 1	15
		2.2.1 Introduction and contact assignment 1	15
		2.2.2 Technical data 1	17
	2.3	KL2809, KL2889 1	18
		2.3.1 Introduction and contact assignment 1	18
		2.3.2 Technical data	20
	2.4	KL2872-0000, KL2872-0010	21
		2.4.1 Introduction and contact assignment	21
		2.4.2 Technical data	23
3	Mour	nting and wiring	24
	3.1	Instructions for ESD protection	24
	3.2	Installation on mounting rails	25
	3.3	Installation instructions for enhanced mechanical load capacity	27
	3.4	Connection system	28
	3.5	Installation positions	31
	3.6	ATEX - Special conditions (standard temperature range)	33
	3.7	ATEX - Special conditions (extended temperature range)	34
	3.8	Continuative documentation for ATEX and IECEx	35
4	Appe	endix	36
	4.1	Support and Service	36

## BECKHOFF

## 1 Foreword

## 1.1 Notes on the documentation

#### Intended audience

This description is only intended for the use of trained specialists in control and automation engineering who are familiar with the applicable national standards.

It is essential that the documentation and the following notes and explanations are followed when installing and commissioning these components.

It is the duty of the technical personnel to use the documentation published at the respective time of each installation and commissioning.

The responsible staff must ensure that the application or use of the products described satisfy all the requirements for safety, including all the relevant laws, regulations, guidelines and standards.

#### Disclaimer

The documentation has been prepared with care. The products described are, however, constantly under development.

We reserve the right to revise and change the documentation at any time and without prior announcement.

No claims for the modification of products that have already been supplied may be made on the basis of the data, diagrams and descriptions in this documentation.

#### Trademarks

Beckhoff<sup>®</sup>, TwinCAT<sup>®</sup>, TwinCAT/BSD<sup>®</sup>, TC/BSD<sup>®</sup>, EtherCAT<sup>®</sup>, EtherCAT G<sup>®</sup>, EtherCAT G10<sup>®</sup>, EtherCAT P<sup>®</sup>, Safety over EtherCAT<sup>®</sup>, TwinSAFE<sup>®</sup>, XFC<sup>®</sup>, XTS<sup>®</sup> and XPlanar<sup>®</sup> are registered trademarks of and licensed by Beckhoff Automation GmbH. Other designations used in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owners.

#### **Patent Pending**

The EtherCAT Technology is covered, including but not limited to the following patent applications and patents: EP1590927, EP1789857, EP1456722, EP2137893, DE102015105702 with corresponding applications or registrations in various other countries.



EtherCAT<sup>®</sup> is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.

#### Copyright

© Beckhoff Automation GmbH & Co. KG, Germany.

The reproduction, distribution and utilization of this document as well as the communication of its contents to others without express authorization are prohibited.

Offenders will be held liable for the payment of damages. All rights reserved in the event of the grant of a patent, utility model or design.

## 1.2 Safety instructions

#### **Safety regulations**

Please note the following safety instructions and explanations! Product-specific safety instructions can be found on following pages or in the areas mounting, wiring, commissioning etc.

#### **Exclusion of liability**

All the components are supplied in particular hardware and software configurations appropriate for the application. Modifications to hardware or software configurations other than those described in the documentation are not permitted, and nullify the liability of Beckhoff Automation GmbH & Co. KG.

#### **Personnel qualification**

This description is only intended for trained specialists in control, automation and drive engineering who are familiar with the applicable national standards.

#### **Description of instructions**

In this documentation the following instructions are used. These instructions must be read carefully and followed without fail!

#### ▲ DANGER

#### Serious risk of injury!

Failure to follow this safety instruction directly endangers the life and health of persons.

#### **WARNING**

#### Risk of injury!

Failure to follow this safety instruction endangers the life and health of persons.

#### **Personal injuries!**

Failure to follow this safety instruction can lead to injuries to persons.

#### NOTE

#### Damage to environment/equipment or data loss

Failure to follow this instruction can lead to environmental damage, equipment damage or data loss.



#### Tip or pointer

This symbol indicates information that contributes to better understanding.

## **1.3 Documentation Issue Status**

Version	Comment				
1.1.0	Technical data updated				
	Chapter Instructions for ESD protection added				
	<ul> <li>Design of the safety instructions adapted to IEC 82079-1</li> </ul>				
	New title page				
1.0.0	First release				

#### Hardware versions

The hardware versions (delivery state) can be taken from the serial number printed on the side of the terminal.

#### Syntax of the serial number

Structure of the serial number: WW YY FF HH

WW - week of production (calendar week) YY - year of production FF - firmware version HH - hardware version Example with serial number 40 15 1A 00:

40 - week of production 40

- 15 year of production 2015
- 1A firmware version 1A
- 00 hardware version 00

## 1.4 Interference-free Bus Terminals

#### Use of interference-free Bus or EtherCAT Terminals in safety applications

If a Bus or EtherCAT Terminal is described as interference-free, this means that the consecutive terminal behaves passively in a safety application (e.g. in the case of the all-pole switch-off of a potential group).

In this case the terminals do not represent an active part of the safety controller and do not affect the Safety Integrity Level (SIL) or Performance Level (PL) attained in the safety application. For details, please refer to chapter 2.17f in the <u>TwinSAFE application manual</u>.

#### NOTE

#### Pay attention to the hardware version

Please pay attention to the information about the hardware version and non-reactivity of the respective Bus Terminal in the chapters "Technical Data" or "Firmware Compatibility"!

Only terminals with the appropriate hardware version may be used without the attained SIL/PL being affected!

The Bus or EtherCAT Terminals regarded as interference-free at the time of preparing this document are listed in the following tables together with their respective hardware versions.

Terminal name Bus Terminal	from hardware version
KL2408	05
KL2809	02
KL2134	09
KL2424	05
KL9110	07

Terminal name EL/ELX terminal	from hardware version
EL2004	15
EL2008	07
EL2022	09
EL2024	06
EL2034	06
EL2809	01
EL2828	00
EL2872	01
EL2878-0005	00
EL9110	13
EL9410	16
ELX1052	00
ELX1054	00
ELX1058	00
ELX2002	00
ELX2008	00
ELX3152	00
ELX3181	00
ELX3202	00
ELX3204	00
ELX3252	00
ELX3312	00
ELX3314	00
ELX3351	00
ELX4181	00
ELX5151	00
ELX9560	03

## BECKHOFF

#### **External wiring**

The following requirements are to be ensured by the system manufacturer and must be incorporated into the user documentation.

Protection class IP54

The terminals must be installed in IP54 control cabinets to ensure the necessary protection class IP54.

- Power supply unit The standard terminals must be supplied with 24 V by an SELV/PELV power supply unit with an output voltage limit U<sub>max</sub> of 60 V in the event of a fault.
- Prevention of feedback

Feedback can be prevented through different measures. These are described below. In addition to mandatory requirements there are also optional requirements, of which only one needs to be selected.

• No switching of loads with a separate power supply

Loads that have their own power supply must not be switched by standard terminals, since in this case feedback via the load cannot be ruled out.

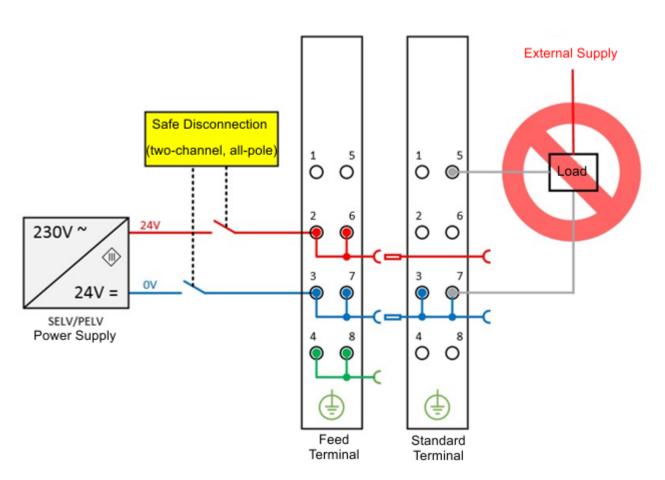


Fig. 1: Negative example - active load

- The control of an STO input of a frequency converter could serve here as a negative example.
   Exceptions to the general requirement are allowed only if the manufacturer of the connected load guarantees that feedback to the control input cannot occur. This can be achieved, for example, through adherence to load-specific standards.
- **Option 1: Ground feedback and all-pole disconnection** The ground connection of the connected load must be fed back to the safely switched ground.

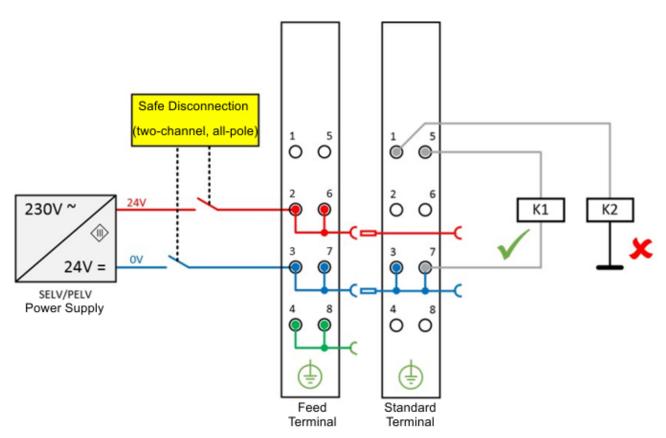


Fig. 2: Ground connection of the load: correct (K1) and incorrect (K2)

• If either

a) the ground of the load is not fed back to the terminal or

b) the ground is not safely switched but connected permanently

then fault exclusions are necessary with regard to a short-circuit with external potential in order to be able to achieve Cat. 4 PLe according to EN ISO 13849-1:2007 or SIL3 according to IEC 61508:2010 (refer here to the overview in the chapter "Effect of options on the safety level").

#### • Option 2: Cable short-circuit fault exclusion

If solution option 1 is not feasible, the ground feedback and all-pole disconnection can be dispensed with if the danger of feedback due to a cable short-circuit can be excluded by other measures. These measures, which can be implemented alternatively, are described in the following sections.

Foreword

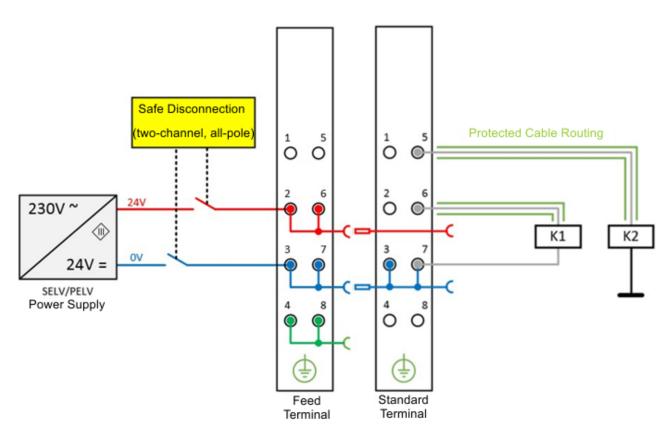


Fig. 3: Short circuit fault exclusion through protected cable laying

- a) Possibility 1: Load connection via separate sheathed cables
   The non-safely switched potential of the standard terminal may not be conducted together with other potential-conducting cores inside the same sheathed cable. (*Fault exclusion, see EN ISO 13849-2:2013, Table D.4*)
- **b)** Possibility 2: Wiring only inside the control cabinet All loads connected to the non-safe standard terminals must be located in the same control cabinet as the terminals. The cables are routed entirely inside the control cabinet. (*Fault exclusion, see EN ISO 13849-2:2013, Table D.4*)

# c) Possibility 3: Dedicated earth connection per conductor All conductors connected to the non-safe standard terminals are protected by their own earth connection. (*Fault exclusion, see EN ISO 13849-2:2013, Table D.4*)

• **d) Possibility 4: Cable permanently (fixed) installed and protected against external damage** All conductors connected to the non-safe standard terminals are permanently fixed and, e.g. protected against external damage by a cable duct or armored pipe.

#### Effect of the options on the safety level

In principle, standard terminals in safely switched potential groups are not an active part of the safety controller. Accordingly, **the safety level attained is defined only by the higher-level safety controller**, i.e. the standard terminals are not included in the calculation! However, the wiring of the standard terminals can lead to limitations in the maximum attainable safety level. Depending on the solution selected for the avoidance of feedback and the safety standard considered (see Option 1 and Option 2), different maximum attainable safety levels result, which are summarized in the following table:


Feedback avoidance measures	DIN EN ISO 13849-1	IEC 61508	EN 62061
Fault exclusion	max.	max. SIL3	max. SIL2 *
Cable short-circuit	Cat. 4		
Ground feedback and all-pole disconnection	PLe		max. SIL3

#### Summary of safety classifications

## 2 **Product overview**

Terminal	Outputs	Voltage	Current	Comment
KL2808 [) 12]	8	24 V <sub>DC</sub>	0,5 A	
KL2828 [) 15]	8	24 V <sub>DC</sub>	2 A	
KL2809 [) 18]	16	24 V <sub>DC</sub>	0,5 A	
KL2872-0000 [> 21]	16	24 V <sub>DC</sub>	0,5 A	ribbon cable connection
KL2872-0010 [ 21]	16	24 V <sub>DC</sub>	0,5 A	ribbon cable connection, ground switching
KL2889 [▶ 18]	16	24 V <sub>DC</sub>	0,5 A	ground switching

## 2.1 KL2808

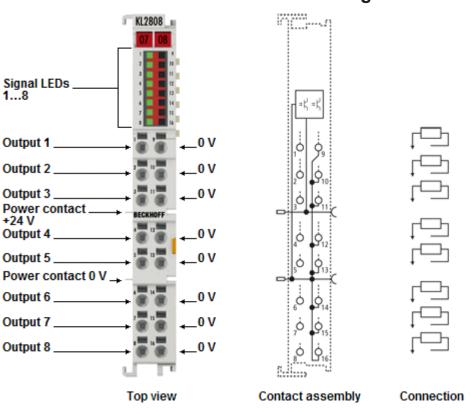

## 2.1.1 Introduction and contact assignment

Fig. 4: KL2808

#### HD Bus Terminal, 8-channel digital output 24 $V_{\mbox{\tiny DC}}$ 0.5 A

The KL2808 digital output terminal connects the binary control signals from the automation device on to the actuators at the process level with electrical isolation. The KL2808 is protected against polarity reversal and processes load currents with outputs protected against overload and short-circuit. The Bus Terminal contains eight channels, consisting of a signal output and 0  $V_{DC}$ . The signal states are displayed by LEDs. The power contacts are looped through.

The outputs are fed via the 24 V power contact in the KL2808. The conductors can be connected without tools in the case of solid wires using a direct plug-in technique.

The HD Bus Terminals (High Density) with increased packing density feature 16 connection points in the housing of a 12 mm terminal block.

#### KL2808 - LEDs

LED Color		Meaning			
OUTPUT 1- 8 green		off	No output signal		
		on	24 V <sub>DC</sub> output signal at the respective output		

#### KL2808 – contact assignment

Terminal point		Description
Name	No.	
Output 1	1	Output 1
Output 2	2	Output 2
Output 3	3	Output 3
Output 4	4	Output 4
Output 5	5	Output 5
Output 6	6	Output 6
Output 7	7	Output 7
Output 8	8	Output 8
0 V	9	0 V (internally connected to terminal point 10, 11, 12, 13, 14, 15, 16 and negative power contact)
0 V	10	0 V (internally connected to terminal point 9, 11, 12, 13, 14, 15, 16 and negative power contact)
0 V	11	0 V (internally connected to terminal point 9, 10, 12, 13, 14, 15, 16 and negative power contact)
0 V	12	0 V (internally connected to terminal point 9, 10, 11, 13, 14, 15, 16 and negative power contact)
0 V	13	0 V (internally connected to terminal point 9, 10, 11, 12, 14, 15, 16 and negative power contact)
0 V	14	0 V (internally connected to terminal point 9, 10, 11, 12, 13, 15, 16 and negative power contact)
0 V	15	0 V (internally connected to terminal point 9, 10, 11, 12, 13, 14, 16 and negative power contact)
0 V	16	0 V (internally connected to terminal point 9, 10, 11, 12, 13, 14, 15 and negative power contact)

## 2.1.2 Technical data


Technical data	KL2808
Connection technology	2-wire
Number of Outputs	8
Rated load voltage	24 V <sub>DC</sub> (-15% / +20%)
Load type	ohmic, inductive, lamp load
Output current	max. 0.5 A (short-circuit-proof) per channel
Short circuit current	< 2 A
Breaking energy	< 150 mJ/channel
Reverse voltage protection	yes
Current consumption K-bus	typ. 20 mA
Current consumption power contacts	typ. 15 mA + load
Electrical isolation	500 V (K-bus/field potential)
Bit width in the process image	8 output bits
Configuration	no address or configuration setting
Dimensions (W x H x D)	app. 15 mm x 100 mm x 70 mm (aligned width 12 mm)
Weight	app. 65 g
Mounting [ 24]	on 35 mm mounting rail according to EN 60715
Permissible ambient temperature range during operation	0°C +55°C
Permissible ambient temperature range during storage	-25°C +85°C
Permissible relative humidity	95 %, no condensation
Vibration / shock resistance	conforms to EN 60068-2-6 / EN 60068-2-27, see also Installation instructions for enhanced mechanical load capacity [▶ 27]
EMC immunity / emission	conforms to EN 61000-6-2 / EN 61000-6-4
Installation position	variable, see chapter Installation positions [> 31]
Protection class	IP20
Approvals / markings	CE, cULus, GL, <u>ATEX [▶ 33]</u>

#### Ex marking

Standard	Marking				
ATEX	II 3 G Ex nA IIC T4 Gc				

## BECKHOFF

## 2.2 KL2828

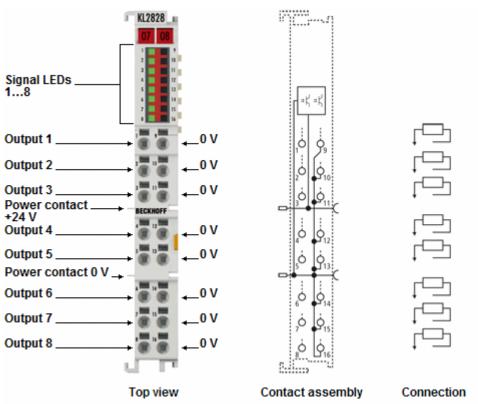

### 2.2.1 Introduction and contact assignment

Fig. 5: KL2828

#### HD Bus Terminal, 8-channel digital output 24 $V_{\mbox{\tiny DC}}$ , 2 A

The 8-channel KL2828 digital output terminal connects the binary control signals from the electrically isolated automation device on to the actuators at the process level. The KL2828 is protected against polarity reversal and processes load currents with outputs protected against overload and short-circuit. The HD Bus Terminal contains eight 2 A channels, consisting of signal output and 0 V, whose signal state are indicated by light emitting diodes. The power contacts are looped through. In the KL2828 the outputs are fed via the 24 V power contact. The conductors can be connected without tools in the case of single-wire conductors using a direct plug-in technique. The maximum total output current of the terminal is 10 A.

#### KL2828 - LEDs

LED	Color	Meaning		
OUTPUT 1-8	green	off	No output signal	
		on	24 $V_{DC}$ output signal at the respective output	


#### KL2828 - contact assignment

Terminal poin	nt	Description
Name	No.	
Output 1	1	Output 1
Output 2	2	Output 2
Output 3	3	Output 3
Output 4	4	Output 4
Output 5	5	Output 5
Output 6	6	Output 6
Output 7	7	Output 7
Output 8	8	Output 8
0 V	9	0 V (internally connected to terminal point 10, 11, 12, 13, 14, 15, 16 and negative power contact)
0 V	10	0 V (internally connected to terminal point 9, 11, 12, 13, 14, 15, 16 and negative power contact)
0 V	11	0 V (internally connected to terminal point 9, 10, 12, 13, 14, 15, 16 and negative power contact)
0 V	12	0 V (internally connected to terminal point 9, 10, 11, 13, 14, 15, 16 and negative power contact)
0 V	13	0 V (internally connected to terminal point 9, 10, 11, 12, 14, 15, 16 and negative power contact)
0 V	14	0 V (internally connected to terminal point 9, 10, 11, 12, 13, 15, 16 and negative power contact)
0 V	15	0 V (internally connected to terminal point 9, 10, 11, 12, 13, 14, 16 and negative power contact)
0 V	16	0 V (internally connected to terminal point 9, 10, 11, 12, 13, 14, 15 and negative power contact)

## 2.2.2 Technical data

Technical data	KL2828
Connection technology	2 wire
Number of outputs	8
Rated load voltage	24 V <sub>DC</sub> (-15% / +20%)
Load type	ohmic, inductive, capacitive
Output current	max. 2 A per channel (∑ max. 10 A)
Short circuit current	< 40 A typ.
Breaking energy	< 1.2 J/channel
Reverse voltage protection	yes
Current consumption K-bus	typ. 18 mA
Current consumption of power contacts	typ. 15 mA + load
Electrical isolation	500 V (K-bus/field potential)
Bit width in process image	8 output bits
Configuration	no address or configuration settings required
Dimensions (W x H x D)	app. 15 mm x 100 mm x 70 mm (aligned width 12 mm)
Weight	арр. 70 g
Mounting [ 24]	on 35 mm mounting rail according to EN 60715
Permissible ambient temperature range during operation	-25°C +60°C (extended temperature range)
Permissible ambient temperature range during storage	-40°C +85°C
Permissible relative humidity	95%, no condensation
Vibration / shock resistance	conforms to EN 60068-2-6 / EN 60068-2-27, see also Installation instructions for enhanced mechanical load capacity [▶ 27]
EMC immunity / emission	conforms to EN 61000-6-2 / EN 61000-6-4
Installation position	variable, see chapter Installation positions [> 31]
Protection class	IP20
Approvals / markings	CE, cULus

## 2.3 KL2809, KL2889

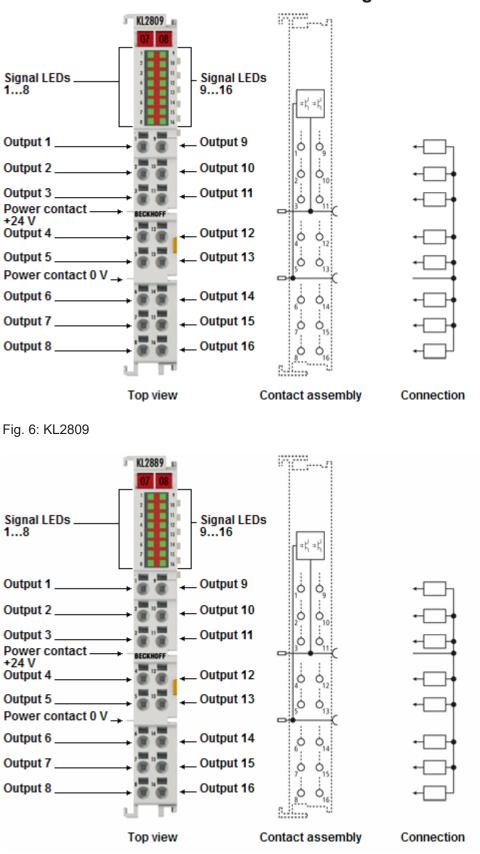

2.3.1 Introduction and contact assignment

Fig. 7: KL2889

#### HD Bus Terminals, 16-channel digital output 24 V<sub>DC</sub>, 0.5 A

The KL2809 digital output terminal connects the binary control signals from the automation device on to the actuators at the process level with electrical isolation. The KL2809 is protected against polarity reversal and processes load currents with outputs protected against overload and short-circuit. The Bus Terminal contains 16 channels, whose signal states are displayed by LEDs. The connection technology is particularly suitable for single-ended inputs. All components have to use the same reference point as the KL2809 or KL2889. The power contacts are looped through.

The outputs of the KL2809 are fed via the 24 V power contact and the outputs of the KL2889 via the 0 V power contact. The conductors can be connected without tools in the case of solid wires using a direct plug-in technique.

The HD Bus Terminals (High Density) with increased packing density feature 16 connection points in the housing of a 12 mm terminal block. They are particularly suitable for space-saving use in control cabinets.

#### KL2809, KL2889 – LEDs

LED	Color	Meaning	
OUTPUT 1- 16	green	off	No output signal
			- Output signal 24 V <sub>DC</sub> (KL2809) - Output signal 0 V (KL2889)

#### KL2809, KL2889 – contact assignment

Terminal point		Description
Name	No.	
Output 1	1	Output 1
Output 2	2	Output 2
Output 3	3	Output 3
Output 4	4	Output 4
Output 5	5	Output 5
Output 6	6	Output 6
Output 7	7	Output 7
Output 8	8	Output 8
Output 9	9	Output 9
Output 10	10	Output 10
Output 11	11	Output 11
Output 12	12	Output 12
Output 13	13	Output 13
Output 14	14	Output 14
Output 15	15	Output 15
Output 16	16	Output 16


## 2.3.2 Technical data

Technical data	KL2809	KL2889	
Connection technology	1-wire		
Number of Outputs	16		
Rated load voltage	24 V <sub>DC</sub> (-15% / +20%)		
Load type	ohmic, inductive, lamp load		
Output current	max. 0.5 A (short-circuit-proof)	per channel	
Short circuit current	< 2 A	< 7 A	
Breaking energy	< 150 mJ/channel	< 100 mJ/channel	
Reverse voltage protection	yes		
Reference potential	Ground (switching to +24 V potential)	+24 V (switching to ground potential)	
Current consumption K-bus	typ. 35 mA	typ. 45 mA	
Current consumption power contacts	typ. 35 mA + load		
Electrical isolation	500 V (K-bus / field potential)		
Bit width in the process image	16 output bits		
Configuration	no address or configuration setting		
Dimensions (W x H x D)	app. 15 mm x 100 mm x 70 mm (aligned width 12 mm)		
Weight	арр. 70 g		
Mounting [▶ 24]	on 35 mm mounting rail according to EN 60715		
Permissible ambient temperature range during operation	-25°C +60°C		
Permissible ambient temperature range during storage	-40°C +85°C		
Permissible relative humidity	95 %, no condensation		
Vibration / shock resistance	conforms to EN 60068-2-6 /EN 60068-2-27, see also Installation instructions for enhanced mechanical load capacity [▶ 27]		
EMC immunity / emission	conforms to EN 61000-6-2 /EN 61000-6-4		
Installation position	variable, see chapter Installation positions [> 31]		
Protection class	IP20		
Approvals / markings	CE, cULus, GL, <u>ATEX [▶_34]</u>		

#### Ex marking

Standard	Marking
ATEX	II 3 G Ex nA IIC T4 Gc

### 2.4 KL2872-0000, KL2872-0010

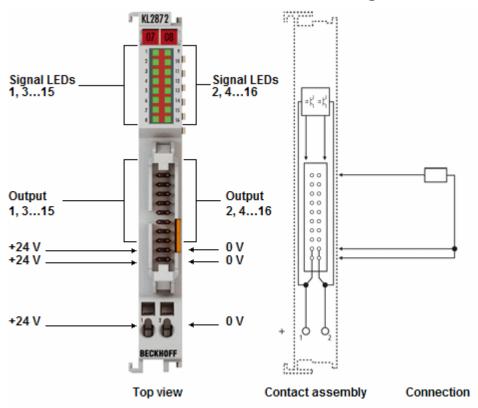

### 2.4.1 Introduction and contact assignment

Fig. 8: KL2872

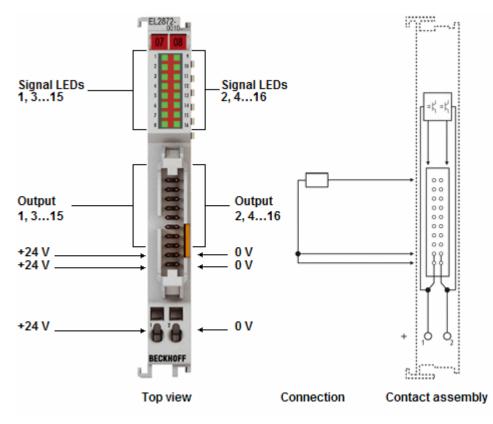


Fig. 9: KL2872-0010

#### Bus Terminals, 16-channel digital output 24 $V_{\text{DC}}$ , 0.5 A, flat-ribbon cable connection

The KL2872-00x0 digital output terminals offers a very compact design with its 16 channels. It is thus ideally suited for multi-pin connector valve terminals. A 20-pin connector enables the secure connection of plug connectors using insulation displacement contact, as is usual for ribbon cables and special round cables. This significantly simplifies the wiring of many channels. State-of-the-art output drivers guarantee minimum power dissipation. 16 LEDs display the logical signal states of the outputs.

#### KL2872, KL2872-0010 – LEDs

LED	Color	Meaning	
OUTPUT 1- 16	green	off	No output signal
			<ul> <li>- 24 V<sub>DC</sub> output signal at the respective output (KL2872-0000)</li> <li>- 0 V output signal at the respective output (KL2872-0010)</li> </ul>

#### KL2872, KL2872-0010 – contact assignment

Terminal point		Description
Name	No.	
+24 V	1	+ 24 V DC
0 V	2	0 V

#### **Contact of pin strip**

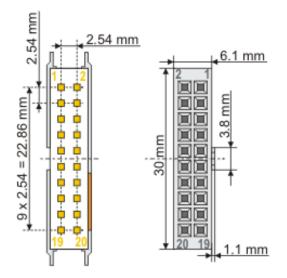


Fig. 10: Dimensions of the 20-pin contact strip in the terminal and the matching spring contact strip

For connections see Contact assembly [> 21]

## 2.4.2 Technical data

Technical data	KL2872-0000	KL2872-0010	
Connection technology	flat-ribbon cable		
Number of Outputs	16		
Rated load voltage	24 V <sub>DC</sub> (-15 %/+20 %)		
Load type	ohmic, inductive, lamp load		
Output current	Max 0.5 A (short-circuit-proof) pe	r channel	
Short circuit current	< 2 A		
Breaking energy	< 150 mJ/channel		
Reverse voltage protection	yes		
Current consumption K-bus	typ. 5 mA		
Current consumption power contacts	typ. 60 mA from the supply (no po	ower contacts)	
Electrical isolation	500 V (K-bus/field potential)		
Reference potential	Ground (switching to +24 V potential)	+24 V (switching to ground potential)	
Bit width in the process image	16 output bits		
Configuration	no address or configuration setting		
Special features	ideal for multi-pin connector valve terminals		
Conductor connection	<u>20-pin contact strip [▶ 22]</u>		
Dimensions (W x H x D)	app. 15 mm x 100 mm x 70 mm (aligned width 12 mm)		
Weight	app. 55 g		
Mounting [ > 24]	on 35 mm mounting rail according to EN 60715		
Permissible ambient temperature range during operation	0°C +55°C		
Permissible ambient temperature range during storage	-25°C +85°C		
Permissible relative humidity	95 %, no condensation		
Vibration / shock resistance	conforms to EN 60068-2-6 /EN 60068-2-27, see also Installation instructions for enhanced mechanical load capacity [> 27]		
EMC immunity / emission	conforms to EN 61000-6-2 /EN 61000-6-4		
Installation position	variable, see chapter Installation positions [>31]		
Protection class	IP20		
Approvals / markings	CE, cULus, <u>ATEX [▶ 33]</u>		

#### Ex marking

Standard	Marking
ATEX	II 3 G Ex nA IIC T4 Gc

## 3 Mounting and wiring

## 3.1 Instructions for ESD protection

#### NOTE

#### Destruction of the devices by electrostatic discharge possible!

The devices contain components at risk from electrostatic discharge caused by improper handling.

- Please ensure you are electrostatically discharged and avoid touching the contacts of the device directly.
- Avoid contact with highly insulating materials (synthetic fibers, plastic film etc.).
- Surroundings (working place, packaging and personnel) should by grounded probably, when handling with the devices.
- Each assembly must be terminated at the right hand end with a KL9010 bus end terminal, to ensure the protection class and ESD protection.

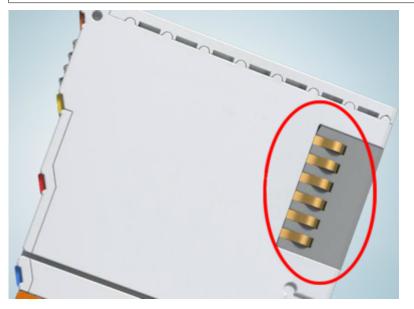


Fig. 11: Spring contacts of the Beckhoff I/O components

## BECKHOFF

## 3.2 Installation on mounting rails

#### 

#### Risk of electric shock and damage of device!

Bring the bus terminal system into a safe, powered down state before starting installation, disassembly or wiring of the bus terminals!

#### Assembly

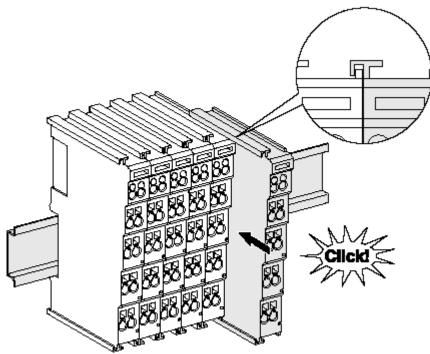


Fig. 12: Attaching on mounting rail

The bus coupler and bus terminals are attached to commercially available 35 mm mounting rails (DIN rails according to EN 60715) by applying slight pressure:

- 1. First attach the fieldbus coupler to the mounting rail.
- 2. The bus terminals are now attached on the right-hand side of the fieldbus coupler. Join the components with tongue and groove and push the terminals against the mounting rail, until the lock clicks onto the mounting rail.

If the terminals are clipped onto the mounting rail first and then pushed together without tongue and groove, the connection will not be operational! When correctly assembled, no significant gap should be visible between the housings.

#### Fixing of mounting rails

The locking mechanism of the terminals and couplers extends to the profile of the mounting rail. At the installation, the locking mechanism of the components must not come into conflict with the fixing bolts of the mounting rail. To mount the mounting rails with a height of 7.5 mm under the terminals and couplers, you should use flat mounting connections (e.g. countersunk screws or blind rivets).

#### Disassembly

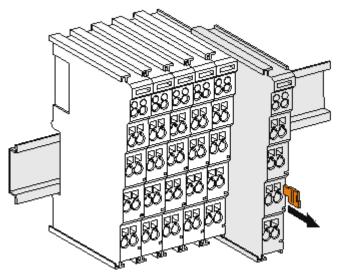


Fig. 13: Disassembling of terminal

Each terminal is secured by a lock on the mounting rail, which must be released for disassembly:

- 1. Pull the terminal by its orange-colored lugs approximately 1 cm away from the mounting rail. In doing so for this terminal the mounting rail lock is released automatically and you can pull the terminal out of the bus terminal block easily without excessive force.
- 2. Grasp the released terminal with thumb and index finger simultaneous at the upper and lower grooved housing surfaces and pull the terminal out of the bus terminal block.

#### **Connections within a bus terminal block**

The electric connections between the Bus Coupler and the Bus Terminals are automatically realized by joining the components:

- The six spring contacts of the K-Bus/E-Bus deal with the transfer of the data and the supply of the Bus Terminal electronics.
- The power contacts deal with the supply for the field electronics and thus represent a supply rail within the bus terminal block. The power contacts are supplied via terminals on the Bus Coupler (up to 24 V) or for higher voltages via power feed terminals.




#### Power Contacts

During the design of a bus terminal block, the pin assignment of the individual Bus Terminals must be taken account of, since some types (e.g. analog Bus Terminals or digital 4-channel Bus Terminals) do not or not fully loop through the power contacts. Power Feed Terminals (KL91xx, KL92xx or EL91xx, EL92xx) interrupt the power contacts and thus represent the start of a new supply rail.

#### **PE power contact**

The power contact labeled PE can be used as a protective earth. For safety reasons this contact mates first when plugging together, and can ground short-circuit currents of up to 125 A.

## BECKHOFF

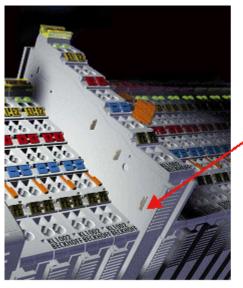

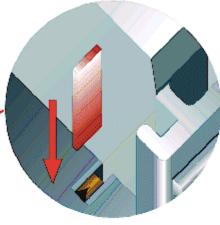


Fig. 14: Power contact on left side

#### NOTE

#### Possible damage of the device

Note that, for reasons of electromagnetic compatibility, the PE contacts are capacitatively coupled to the mounting rail. This may lead to incorrect results during insulation testing or to damage on the terminal (e.g. disruptive discharge to the PE line during insulation testing of a consumer with a nominal voltage of 230 V). For insulation testing, disconnect the PE supply line at the Bus Coupler or the Power Feed Terminal! In order to decouple further feed points for testing, these Power Feed Terminals can be released and pulled at least 10 mm from the group of terminals.

#### 

#### **Risk of electric shock!**

The PE power contact must not be used for other potentials!

# 3.3 Installation instructions for enhanced mechanical load capacity

#### 

#### Risk of injury through electric shock and damage to the device!

Bring the Bus Terminal system into a safe, de-energized state before starting mounting, disassembly or wiring of the Bus Terminals!

#### Additional checks

The terminals have undergone the following additional tests:

Verification	Explanation	
Vibration	10 frequency runs in 3 axes	
	6 Hz < f < 60 Hz displacement 0.35 mm, constant amplitude	
	60.1 Hz < f < 500 Hz acceleration 5 <i>g</i> , constant amplitude	
Shocks	1000 shocks in each direction, in 3 axes	
	25 g, 6 ms	



#### Additional installation instructions

For terminals with enhanced mechanical load capacity, the following additional installation instructions apply:

- The enhanced mechanical load capacity is valid for all permissible installation positions
- Use a mounting rail according to EN 60715 TH35-15
- Fix the terminal segment on both sides of the mounting rail with a mechanical fixture, e.g. an earth terminal or reinforced end clamp
- The maximum total extension of the terminal segment (without coupler) is: 64 terminals (12 mm mounting with) or 32 terminals (24 mm mounting with)
- Avoid deformation, twisting, crushing and bending of the mounting rail during edging and installation of the rail
- The mounting points of the mounting rail must be set at 5 cm intervals
- · Use countersunk head screws to fasten the mounting rail
- The free length between the strain relief and the wire connection should be kept as short as possible. A distance of approx. 10 cm should be maintained to the cable duct.

### 3.4 Connection system

#### **WARNING**

#### Risk of electric shock and damage of device!

Bring the bus terminal system into a safe, powered down state before starting installation, disassembly or wiring of the Bus Terminals!

#### Overview

The Bus Terminal system offers different connection options for optimum adaptation to the respective application:

- The terminals of KLxxxx and ELxxxx series with standard wiring include electronics and connection level in a single enclosure.
- The terminals of KSxxxx and ESxxxx series feature a pluggable connection level and enable steady wiring while replacing.
- The High Density Terminals (HD Terminals) include electronics and connection level in a single enclosure and have advanced packaging density.

#### Standard wiring



Fig. 15: Standard wiring

The terminals of KLxxxx and ELxxxx series have been tried and tested for years. They feature integrated screwless spring force technology for fast and simple assembly.

## BECKHOFF

#### **Pluggable wiring**



Fig. 16: Pluggable wiring

The terminals of KSxxxx and ESxxxx series feature a pluggable connection level.

The assembly and wiring procedure for the KS series is the same as for the KLxxxx and ELxxxx series. The KS/ES series terminals enable the complete wiring to be removed as a plug connector from the top of the housing for servicing.

The lower section can be removed from the terminal block by pulling the unlocking tab.

Insert the new component and plug in the connector with the wiring. This reduces the installation time and eliminates the risk of wires being mixed up.

The familiar dimensions of the terminal only had to be changed slightly. The new connector adds about 3 mm. The maximum height of the terminal remains unchanged.

A tab for strain relief of the cable simplifies assembly in many applications and prevents tangling of individual connection wires when the connector is removed.

Conductor cross sections between 0.08 mm<sup>2</sup> and 2.5 mm<sup>2</sup> can continue to be used with the proven spring force technology.

The overview and nomenclature of the product names for KSxxxx and ESxxxx series has been retained as known from KLxxxx and ELxxxx series.

#### **High Density Terminals (HD Terminals)**



Fig. 17: High Density Terminals

The Bus Terminals from these series with 16 connection points are distinguished by a particularly compact design, as the packaging density is twice as large as that of the standard 12 mm Bus Terminals. Massive conductors and conductors with a wire end sleeve can be inserted directly into the spring loaded terminal point without tools.



#### Wiring HD Terminals

The High Density Terminals of the KLx8xx and ELx8xx series doesn't support steady wiring.

#### Ultrasonically "bonded" (ultrasonically welded) conductors



#### Ultrasonically "bonded" conductors

It is also possible to connect the Standard and High Density terminals with ultrasonically "bonded" (ultrasonically welded) conductors. In this case, please note the tables concerning the <u>wire-size width [▶\_30]</u> below!

#### Wiring

Terminals for standard wiring ELxxxx/KLxxxx and for pluggable wiring ESxxxx/KSxxxx

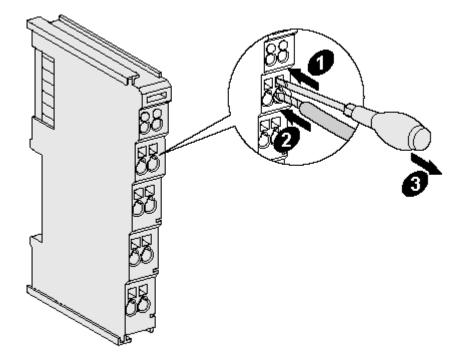


Fig. 18: Mounting a cable on a terminal connection

Up to eight connections enable the connection of solid or finely stranded cables to the Bus Terminals. The terminals are implemented in spring force technology. Connect the cables as follows:

- 1. Open a spring-loaded terminal by slightly pushing with a screwdriver or a rod into the square opening above the terminal.
- 2. The wire can now be inserted into the round terminal opening without any force.
- 3. The terminal closes automatically when the pressure is released, holding the wire securely and permanently.

Terminal housing	ELxxxx, KLxxxx	ESxxxx, KSxxxx
Wire size width	0.08 2,5 mm <sup>2</sup>	0.08 2.5 mm <sup>2</sup>
Wire stripping length	8 9 mm	9 10 mm

#### High Density Terminals ELx8xx, KLx8xx (HD)

The conductors of the HD Terminals are connected without tools for single-wire conductors using the direct plug-in technique, i.e. after stripping the wire is simply plugged into the contact point. The cables are released, as usual, using the contact release with the aid of a screwdriver. See the following table for the suitable wire size width.

Terminal housing	High Density Housing
Wire size width (conductors with a wire end sleeve)	0.14 0.75 mm <sup>2</sup>
Wire size width (single core wires)	0.08 1.5 mm <sup>2</sup>
Wire size width (fine-wire conductors)	0.25 1.5 mm <sup>2</sup>
Wire size width (ultrasonically "bonded" conductors)	only 1.5 mm <sup>2</sup> (see <u>notice [&gt; 29]</u> !)
Wire stripping length	8 9 mm

## BECKHOFF

#### Shielding

#### Shielding

Analog sensors and actors should always be connected with shielded, twisted paired wires.

## 3.5 Installation positions

#### NOTE

#### Constraints regarding installation position and operating temperature range

Please refer to the technical data for a terminal to ascertain whether any restrictions regarding the installation position and/or the operating temperature range have been specified. When installing high power dissipation terminals ensure that an adequate spacing is maintained between other components above and below the terminal in order to guarantee adequate ventilation!

#### **Optimum installation position (standard)**

The optimum installation position requires the mounting rail to be installed horizontally and the connection surfaces of the EL/KL terminals to face forward (see Fig. *Recommended distances for standard installation position*). The terminals are ventilated from below, which enables optimum cooling of the electronics through convection. "From below" is relative to the acceleration of gravity.

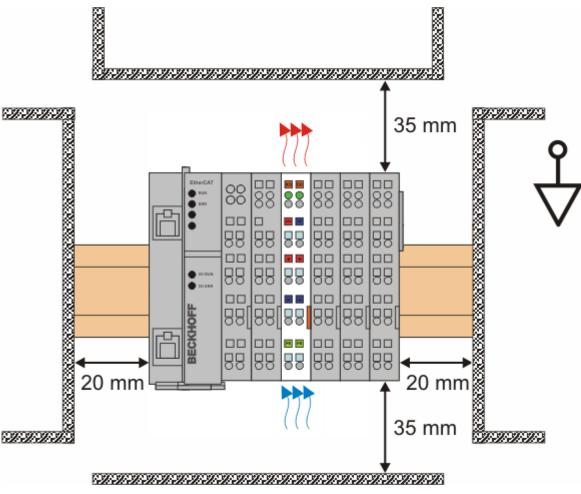



Fig. 19: Recommended distances for standard installation position

Compliance with the distances shown in Fig. *Recommended distances for standard installation position* is recommended.

#### Other installation positions

All other installation positions are characterized by different spatial arrangement of the mounting rail - see Fig *Other installation positions.* 

The minimum distances to ambient specified above also apply to these installation positions.

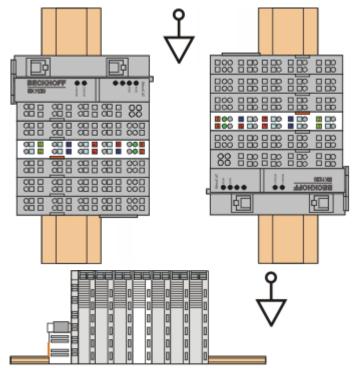




Fig. 20: Other installation positions

# 3.6 ATEX - Special conditions (standard temperature range)

#### **WARNING**

Observe the special conditions for the intended use of Beckhoff fieldbus components with standard temperature range in potentially explosive areas (directive 2014/34/EU)!

- The certified components are to be installed in a suitable housing that guarantees a protection class of at least IP54 in accordance with EN 60079-15! The environmental conditions during use are thereby to be taken into account!
- For dust (only the fieldbus components of certificate no. KEMA 10ATEX0075 X Issue 9): The equipment shall be installed in a suitable enclosure providing a degree of protection of IP54 according to EN 60079-31 for group IIIA or IIIB and IP6X for group IIIC, taking into account the environmental conditions under which the equipment is used!
- If the temperatures during rated operation are higher than 70°C at the feed-in points of cables, lines or pipes, or higher than 80°C at the wire branching points, then cables must be selected whose temperature data correspond to the actual measured temperature values!
- Observe the permissible ambient temperature range of 0 to 55°C for the use of Beckhoff fieldbus components standard temperature range in potentially explosive areas!
- Measures must be taken to protect against the rated operating voltage being exceeded by more than 40% due to short-term interference voltages!
- The individual terminals may only be unplugged or removed from the Bus Terminal system if the supply voltage has been switched off or if a non-explosive atmosphere is ensured!
- The connections of the certified components may only be connected or disconnected if the supply voltage has been switched off or if a non-explosive atmosphere is ensured!
- The fuses of the KL92xx/EL92xx power feed terminals may only be exchanged if the supply voltage has been switched off or if a non-explosive atmosphere is ensured!
- Address selectors and ID switches may only be adjusted if the supply voltage has been switched off or if a non-explosive atmosphere is ensured!

#### Standards

The fundamental health and safety requirements are fulfilled by compliance with the following standards:

- EN 60079-0:2012+A11:2013
- EN 60079-15:2010
- EN 60079-31:2013 (only for certificate no. KEMA 10ATEX0075 X Issue 9)

#### Marking

The Beckhoff fieldbus components with standard temperature range certified according to the ATEX directive for potentially explosive areas bear one of the following markings:



#### II 3G KEMA 10ATEX0075 X Ex nA IIC T4 Gc Ta: 0 ... +55°C

II 3D KEMA 10ATEX0075 X Ex tc IIIC T135°C Dc Ta: 0 ... +55°C (only for fieldbus components of certificate no. KEMA 10ATEX0075 X Issue 9)

or



#### II 3G KEMA 10ATEX0075 X Ex nA nC IIC T4 Gc Ta: 0 ... +55°C

II 3D KEMA 10ATEX0075 X Ex tc IIIC T135°C Dc Ta: 0 ... +55°C (only for fieldbus components of certificate no. KEMA 10ATEX0075 X Issue 9)

# 3.7 ATEX - Special conditions (extended temperature range)

#### **WARNING**

Observe the special conditions for the intended use of Beckhoff fieldbus components with extended temperature range (ET) in potentially explosive areas (directive 2014/34/EU)!

- The certified components are to be installed in a suitable housing that guarantees a protection class of at least IP54 in accordance with EN 60079-15! The environmental conditions during use are thereby to be taken into account!
- For dust (only the fieldbus components of certificate no. KEMA 10ATEX0075 X Issue 9): The equipment shall be installed in a suitable enclosure providing a degree of protection of IP54 according to EN 60079-31 for group IIIA or IIIB and IP6X for group IIIC, taking into account the environmental conditions under which the equipment is used!
- If the temperatures during rated operation are higher than 70°C at the feed-in points of cables, lines or pipes, or higher than 80°C at the wire branching points, then cables must be selected whose temperature data correspond to the actual measured temperature values!
- Observe the permissible ambient temperature range of -25 to 60°C for the use of Beckhoff fieldbus components with extended temperature range (ET) in potentially explosive areas!
- Measures must be taken to protect against the rated operating voltage being exceeded by more than 40% due to short-term interference voltages!
- The individual terminals may only be unplugged or removed from the Bus Terminal system if the supply voltage has been switched off or if a non-explosive atmosphere is ensured!
- The connections of the certified components may only be connected or disconnected if the supply voltage has been switched off or if a non-explosive atmosphere is ensured!
- The fuses of the KL92xx/EL92xx power feed terminals may only be exchanged if the supply voltage has been switched off or if a non-explosive atmosphere is ensured!
- Address selectors and ID switches may only be adjusted if the supply voltage has been switched off or if a non-explosive atmosphere is ensured!

#### Standards

The fundamental health and safety requirements are fulfilled by compliance with the following standards:

- EN 60079-0:2012+A11:2013
- EN 60079-15:2010
- EN 60079-31:2013 (only for certificate no. KEMA 10ATEX0075 X Issue 9)

#### Marking

The Beckhoff fieldbus components with extended temperature range (ET) certified according to the ATEX directive for potentially explosive areas bear the following marking:



#### II 3G KEMA 10ATEX0075 X Ex nA IIC T4 Gc Ta: -25 ... +60°C

II 3D KEMA 10ATEX0075 X Ex tc IIIC T135°C Dc Ta: -25 ... +60°C (only for fieldbus components of certificate no. KEMA 10ATEX0075 X Issue 9)

or



#### II 3G KEMA 10ATEX0075 X Ex nA nC IIC T4 Gc Ta: -25 ... +60°C

II 3D KEMA 10ATEX0075 X Ex tc IIIC T135°C Dc Ta: -25 ... +60°C (only for fieldbus components of certificate no. KEMA 10ATEX0075 X Issue 9)

## 3.8 Continuative documentation for ATEX and IECEx

# Continuative documentation about explosion protection according to ATEX and IECEx

Pay also attention to the continuative documentation

#### Ex. Protection for Terminal Systems

Notes on the use of the Beckhoff terminal systems in hazardous areas according to ATEX and IECEx

that is available for <u>download</u> on the Beckhoff homepage www.beckhoff.com!

# 4 Appendix

## 4.1 Support and Service

Beckhoff and their partners around the world offer comprehensive support and service, making available fast and competent assistance with all questions related to Beckhoff products and system solutions.

#### Beckhoff's branch offices and representatives

Please contact your Beckhoff branch office or representative for <u>local support and service</u> on Beckhoff products!

The addresses of Beckhoff's branch offices and representatives round the world can be found on her internet pages: <u>https://www.beckhoff.com</u>

You will also find further documentation for Beckhoff components there.

#### **Beckhoff Support**

Support offers you comprehensive technical assistance, helping you not only with the application of individual Beckhoff products, but also with other, wide-ranging services:

- support
- · design, programming and commissioning of complex automation systems
- · and extensive training program for Beckhoff system components

Hotline:	+49 5246 963 157
Fax:	+49 5246 963 9157
e-mail:	support@beckhoff.com

#### **Beckhoff Service**

The Beckhoff Service Center supports you in all matters of after-sales service:

- · on-site service
- · repair service
- · spare parts service
- hotline service

Hotline:	+49 5246 963 460
Fax:	+49 5246 963 479
e-mail:	service@beckhoff.com

#### **Beckhoff Headquarters**

Beckhoff Automation GmbH & Co. KG

Huelshorstweg 20 33415 Verl Germany

Phone:	+49 5246 963 0
Fax:	+49 5246 963 198
e-mail:	info@beckhoff.com
web:	https://www.beckhoff.com

# Table of figures

Fig. 1	Negative example – active load	9
Fig. 2	Ground connection of the load: correct (K1) and incorrect (K2)	10
Fig. 3	Short circuit fault exclusion through protected cable laying	11
Fig. 4	KL2808	12
Fig. 5	KL2828	15
Fig. 6	KL2809	18
Fig. 7	KL2889	18
Fig. 8	KL2872	21
Fig. 9	KL2872-0010	21
Fig. 10	Dimensions of the 20-pin contact strip in the terminal and the matching spring contact strip	22
Fig. 11	Spring contacts of the Beckhoff I/O components	24
Fig. 12	Attaching on mounting rail	25
Fig. 13	Disassembling of terminal	26
Fig. 14	Power contact on left side	27
Fig. 15	Standard wiring	28
Fig. 16	Pluggable wiring	29
Fig. 17	High Density Terminals	29
Fig. 18	Mounting a cable on a terminal connection	30
Fig. 19	Recommended distances for standard installation position	31
Fig. 20	Other installation positions	32

More Information: www.beckhoff.com/KL2xxx

Beckhoff Automation GmbH & Co. KG Hülshorstweg 20 33415 Verl Germany Phone: +49 5246 9630 info@beckhoff.com www.beckhoff.com

